


Build Yourself Drawings



Cover cast iron, dark metal or pyrex glassware with a high temperature bag, like a Reynolds Turkey Bag. Can be used for preprocessing of BioDiesel oil or grease. Point at sun once every 15 minutes. Use on sunny days. Pegs are used to adjust and hold Solar Wings in position. (Pegs can be dull philips head screw drivers).

SOLAR WEDGE COOKER

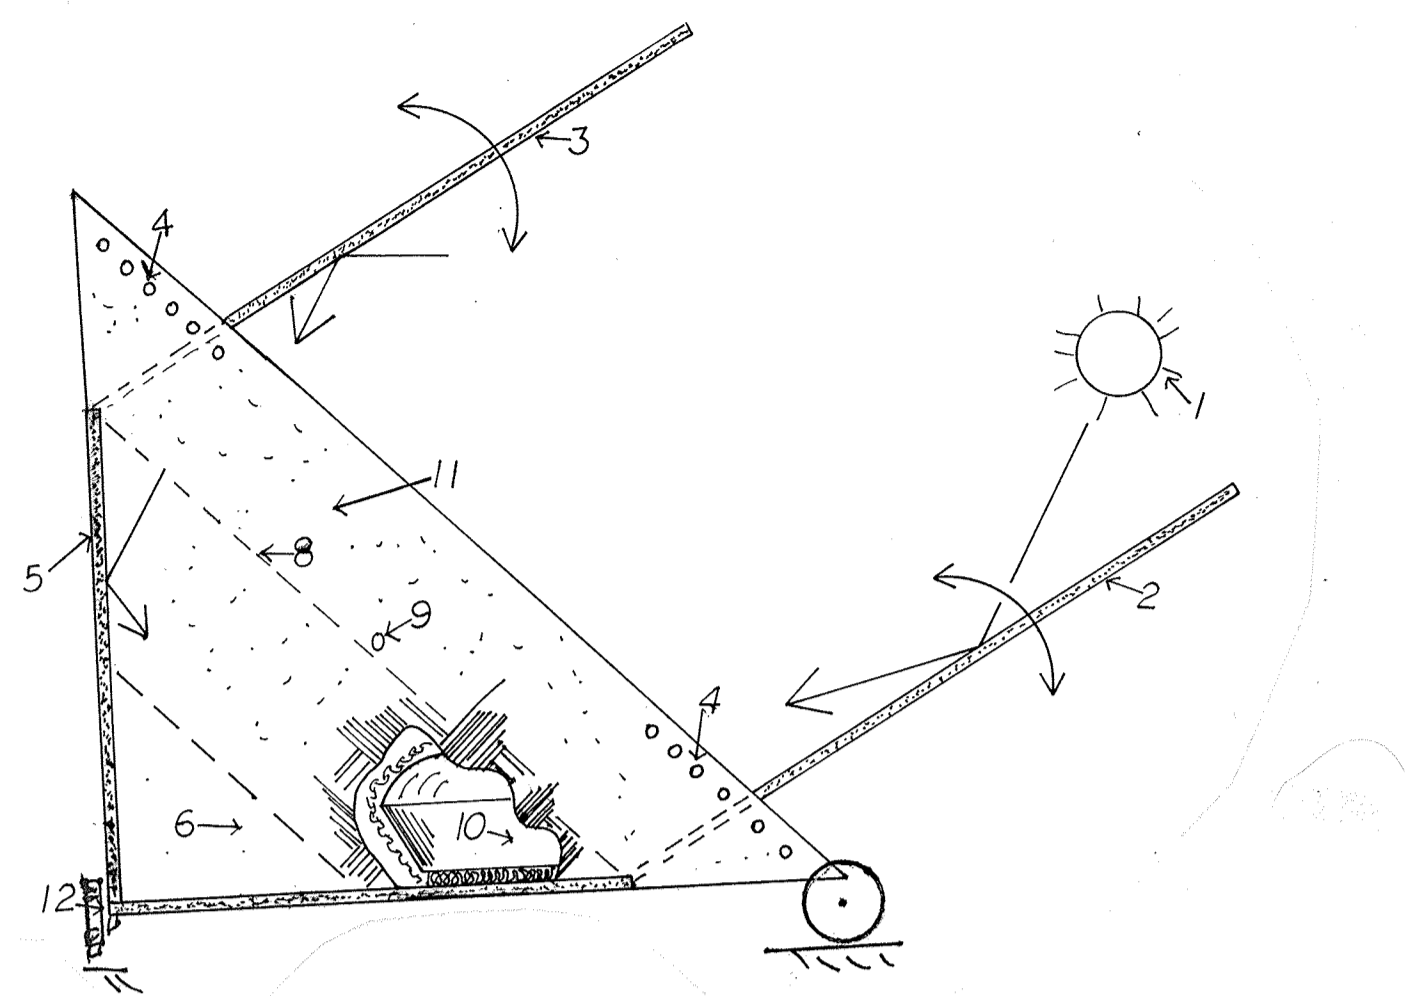